B-Class armchair

Quick reference sheet

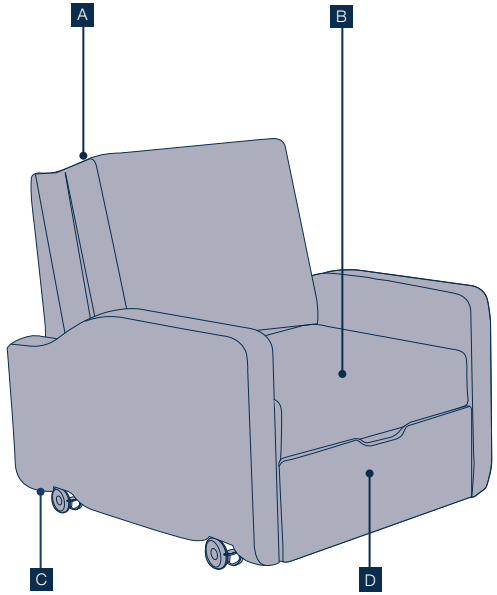

Armchair components

A	Backrest	C	4 wheels Ø 7,5 cm
B	Seat	D	Inner compartment.

Other functions of the armchair

Wheels

To move the chair, whether for mobility in the room or for larger transfers, the chair incorporates Ø7.5 cm wheels with an individual brake on each of the rear wheels.

Braking system

- Activate brake: Press the pedal to its lowest position, when activating the brake the wheel will lock (1).
- Deactivate the brake: Lift the pedal with your foot until it is in its highest position (2)

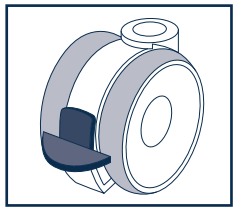

Wheels with individual brake

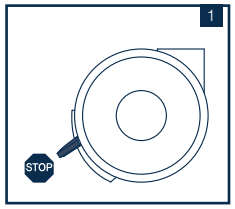

Brake

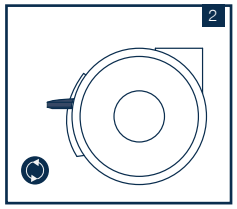

Free movement

Cleaning

It is recommended to clean the unit with detergent and warm water. Do not use excessive amounts of liquid or abrasive cleaning products.

Daily cleaning and disinfection:

- Backrest, central module, seat, armrests, inner compartment.

Cleaning and disinfection after a patient leaves or before a transfer and every two months:

- The whole chair.

Maintenance

Always check the correct condition of:

- Wheels.
- Braking mechanisms.
- Mechanical components for driving the backrest and legrest.

For more information, please consult the use and maintenance manual.

www.pardo.es
TECHNICAL SERVICE CENTRE
(+34) 976 300 033

sept 2024 | Cód:PCO701237_QuickSheet_B-Class_EN_2024_rev01

Mechanical operation

Armchair extension

To proceed to convert the chair into a bed, follow the steps below:

- Brake the wheels of the chair, as indicated above.
- Pull the small opening in the chair drawer until it opens completely (1).
- The center module can be pressed down to help extend it fully (2).
- Keep pulling carefully until the chair is fully extended (3).

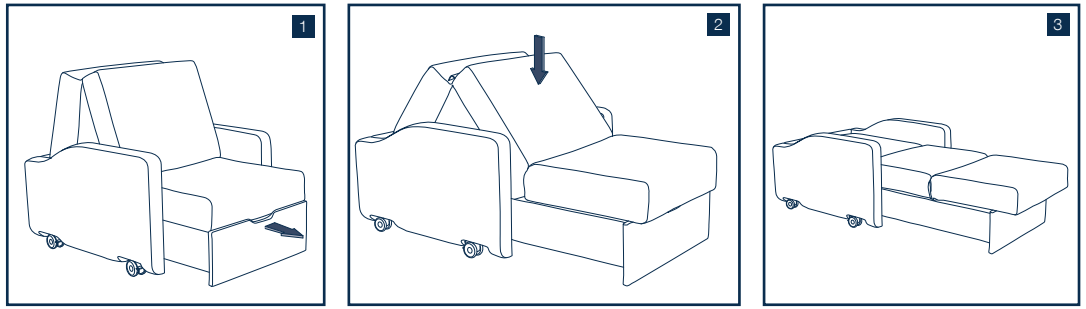

Armchair extension

Armchair folding

To return the chair to its original position, the procedure is as follows:

- Ensure the wheels are braked.
- Pull up the central module of the armchair (1).
- When this module is partially raised, it can be pushed from the drawer to fold it gently (2).
- Bring it back to its original position.

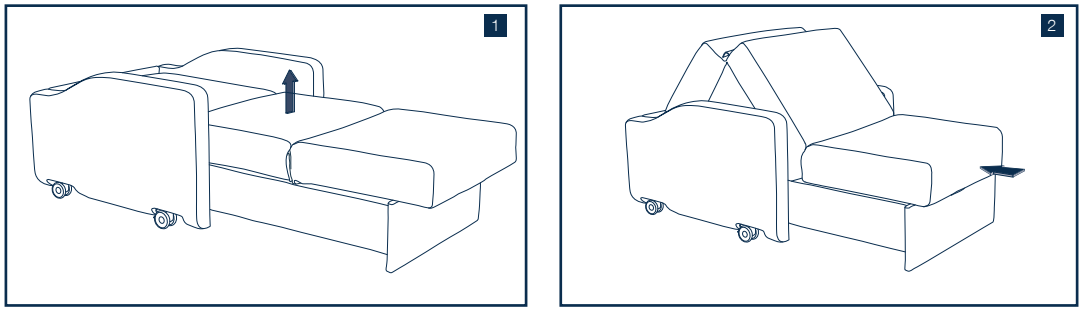

Armchair folding

Accesories

Inner compartment

- To access this compartment, you simply have to lift the seat section (1).
- The seat remains secured in its upper position.
- To lower the seat you have to push it forward a little until the hinge unlocks, then lower it slowly (2).

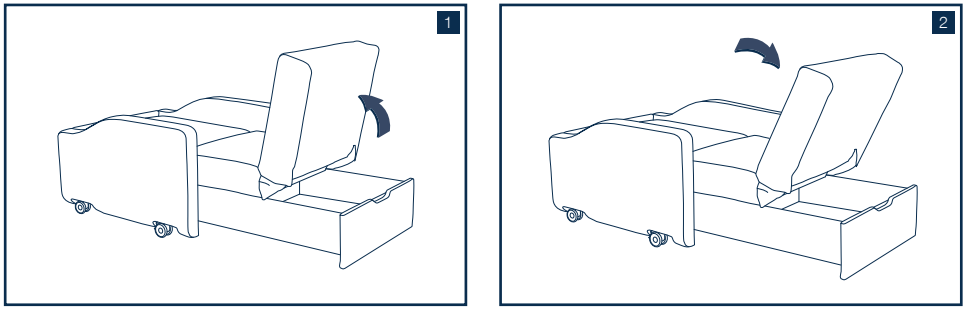

Access the inner compartment

Industrias Hidráulicas Pardo S.L. has the following certificates

SAFETY WARNINGS

- Do not sit on the backrest to avoid lack of stability of the chair or breakage due to overweight. Handle the leg section carefully when lifting or folding it down in order to avoid crushing your hands.
- Do not sit on the armrest to avoid a lack of stability of the chair or breakage due to overweight.
- Handle the leg section carefully when lifting or picking it up in order to avoid crushing your hands.
- If the chair or the patient is not being transported, the brakes on all wheels must be activated as damage could occur if it were to move accidentally.

Industrias Hidráulicas Pardo, S.L. C/ Los Ángeles 5, (Polígono Centrovía) - 50198 La Muela, Zaragoza (Spain)