Sentra armchair

Quick reference sheet

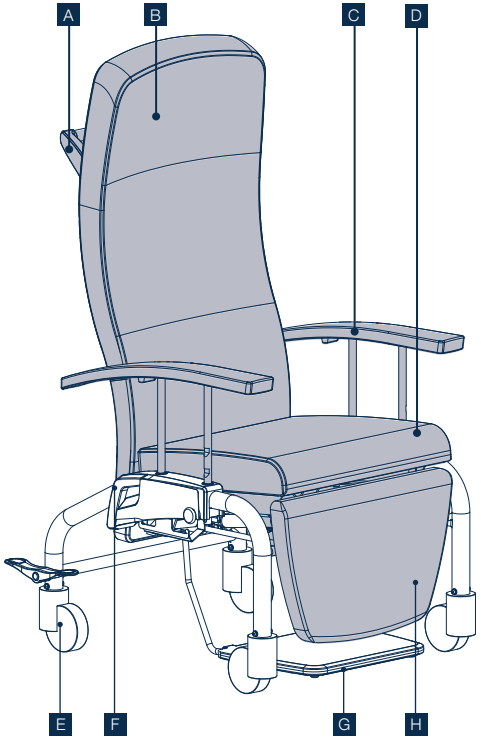

Armchair components

A	Carrying handle	E	Double wheels Ø10 cm
B	Backrest	F	Legrest actuation lever
C	Armrest	G	Footrest
D	Seat	H	Legrest

Other functions of the armchair

Armrest

- Lower: Pull the knob on both sides of the armchair and at the same time press down on the armrest.
- Raise: Pull the knob again and at the same time raise the armrest until it stops.

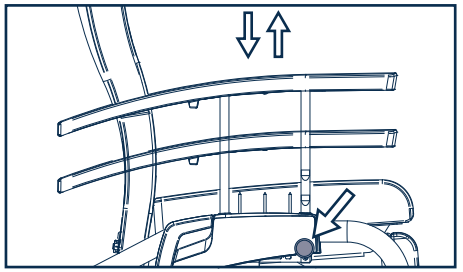

Armrest raising

Wheels and braking system

- Activate brake: lift the pedal to its highest position (1).
- Free movement: move the pedal to its middle position (2).
- Steering wheel: press the pedal with your foot to the lowest position (3).

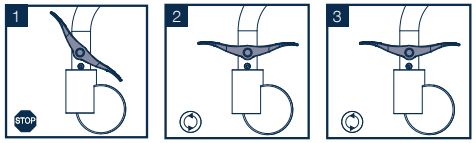

Individual braking system

- Depress the pedal to its lowest position, when the brake is activated the wheel will lock.
- To deactivate, press the pedal to its highest position with your foot.

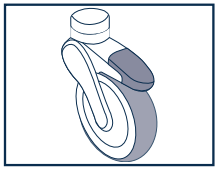

Cleaning

It is recommended to clean the unit with detergent and warm water. Do not use excessive amounts of liquid or abrasive cleaning products.

Daily cleaning and disinfection

- Backrest, seat, legrest, armrest and handle.

Cleaning and disinfection after a patient leaves or before a transfer:

- Backrest, seat, legrest, armrest, handle, footrest, operating levers.

Thorough cleaning and disinfection every two months:

- The whole chair.

Maintenance

Always check the correct condition of:

- Wheels.
- Braking mechanisms.
- Mechanical components for driving the backrest and legrest.

For more information, please consult the use and maintenance manual.

www.pardo.es
TECHNICAL SERVICE CENTRE
(+34) 976 300 033

may 2025 | Cód: PCO702107_QuickSheet_Sentra_EN_2024

Mechanical operation

Backrest adjustment

- Lowering the backrest: Pull up and turn the lever on the left-hand side of the seat, push the backrest to the desired position and release the lever.
- Raise the backrest: Pull up again by hand and turn the lever on the left-hand side of the seat and allow the seat to rise freely, without leaning on it or exerting any force.

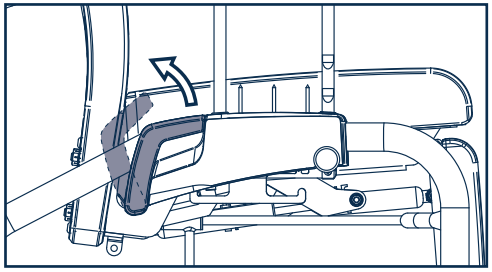

Backrest adjustment lever

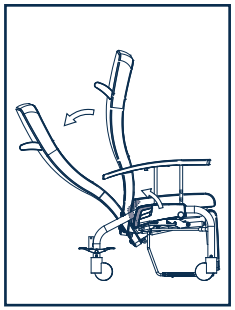

Lowering the backrest

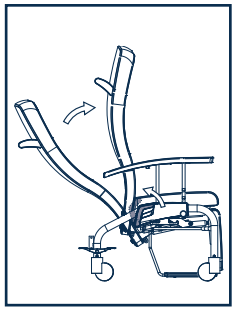

Raising the backrest

Legrest adjustment

- Extend: Move the lever on the right-hand side of the seat backwards and allow the legrest to rise freely until it is in the desired position.
- To retract: Press the lever on the right-hand side of the seat and push down on the legrest until it lowers to its original position.

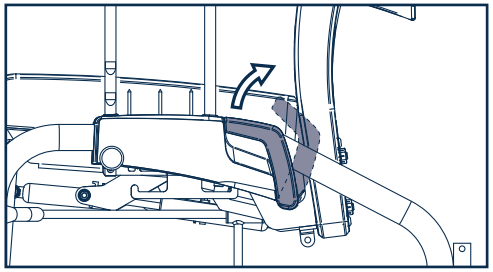

Legrest adjustment lever

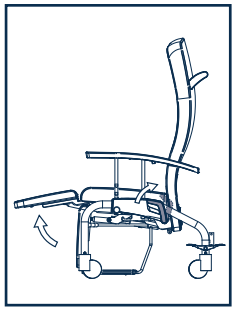

Extend legrest

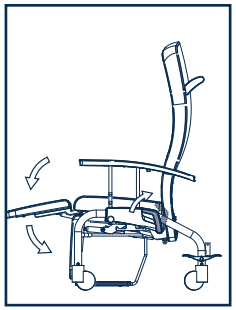

Retract legrest

Accesories

Footrest

- When the version of the chair is with four wheels, there is the possibility of incorporating a footrest.
- To retract the footrest is to move it inwards so that it is hidden under the seat.

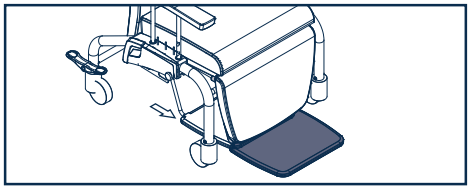

Extended footrest

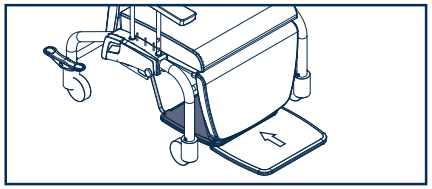

Retracted footrest

Armchair setup

Depending on the user for whom the chair is intended, patient or companion, it can be configured with different accessories:

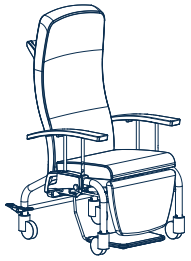

Sentra FRC

Sentra FRI

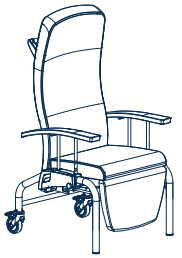

Sentra DUO

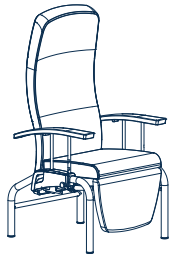

Sentra RLX

Industrias Hidráulicas Pardo S.L. has the following certificates

SAFETY WARNINGS

- Do not sit on the backrest to avoid lack of stability of the chair or breakage due to overweight. Handle the leg section carefully when lifting or folding it down in order to avoid crushing your hands.
- Do not sit on the armrest to avoid a lack of stability of the chair or breakage due to overweight.
- Handle the leg section carefully when lifting or picking it up in order to avoid crushing your hands.
- If the chair or the patient is not being transported, the brakes on all wheels must be activated as damage could occur if it were to move accidentally.

Industrias Hidráulicas Pardo, S.L. C/ Los Ángeles 5, (Polígono Centrovía) - 50198 La Muela, Zaragoza (Spain)